



2CCT&3Watt Tunable Linear Highbay LED Light



PLUG & PLAY SENSOR



Date:_____ Location: _____

Product:_____ Project:_____

Quantity:_____ Catalog# _____

FEATURES

- 110/165/220W Tunable, 40/50K Selectable.
- Built in Sensor socket, Easy plug and play with Sensor
- Air craft hanging cable provided for easy install.
- 50,000 hours life time

SUITABLE APPLICATIONS

- Warehouse Lighting
- Industrial lighting
- Shopping mall lighting
- Factory lighting

CONSTRUCTION:

Fast dissipation aluminum material, with white powder-coated finish. Frosted PC optics lens.

ELECTRICAL:

Available as 120-277V input. -20°C to 45°C.

OPTICALSYSTEM:

High brightness Lumileds chips. 106° beam angle.

INSTALLATION&MOUNTING:

Suspended/Ceiling Surface Mounting for easy installation

WARRANTY:

5-year limited warranty. Actual performance may differ as a result of end-user environment and application.

PERFORMANCE

DLC Model NO	Motion Sensor Detection Distance	Wattage	Voltage/CurrentInput		Light Efficiency	Kelvin Options
			120V	277V		
LS-LHBV5-220WBMB1A1- ABDW40/50K	40FTto50FT	110	0.91A	0.39A	140LM/W	4000K/5000K
	40FTto50FT	165	1.37A	0.59A	140LM/W	4000K/5000K
	40FTto50FT	220	1.83A	0.79A	140LM/W	4000K/5000K

2CCT&3 Watt tunable Linear Highbay LED Light



OPTIONAL ACCESSORIES



Twist off the cap and insert the sensor



Emergency Battery Backup

PRODUCT ORDERING GUIDE

LS-LHBV5-220WBMB1A1-ABDW40/50K

1 2 3 4

LS - LHBV5 - 220W - BMB1A1-ABDW40/50K

- ☒ LS howdylighting
- ☒ L H B V 5LED Linear Highbay Light

Wattage adjustable 110/165/220W

- ☒ 110W Power 110W ☐ 165W Power 165W
- ☐ 220W Power 220W


CCT adjustable 4000/5000K.

- ☐ XX K CCT 4000
- ☒ XX K
- K CCT 5000
- K

Electric Characteristic


Specification/Model	LS-LHBV5-220WBMB1A1-ABDW40/50K		
LED Driver	UL DRIVER 0-10V dimming		
Input power	110W	165W	220W
Lumens output	15400LM	23100LM	30800LM
Efficiency	140LM/W	140LM/W	140LM/W
CRI	>80	>80	>80
CCT tunable	40K/50K	40K/50K	40K/50K
Input voltage	120-277V/AC	120-277V/AC	120-277V/AC
Light distribution type	106D	106D	106D
Working temperature	-20+40°C	-20+40°C	-20+40°C
Junction temperature	<75°C	<75°C	<75°C
lamps efficiency	≥90%	≥90%	≥90%
Certificate	UL CUL DLC	UL CUL DLC	UL CUL DLC
Equivalent	220-330W MH/HPS	330-500W MH/HPS	500-700W MH/HPS

► DIMENSION

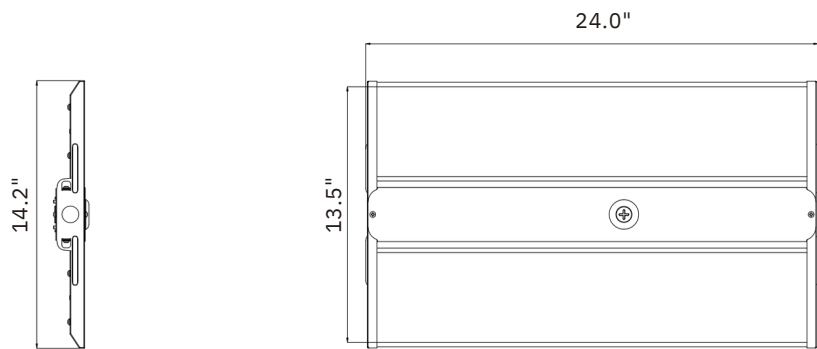


DISTRIBUTION DIAGRAM


LHB-110W-50K

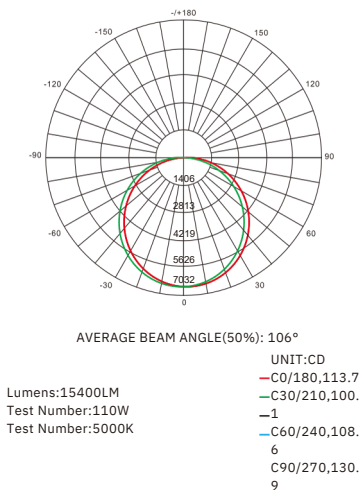

LHB-165W-50K

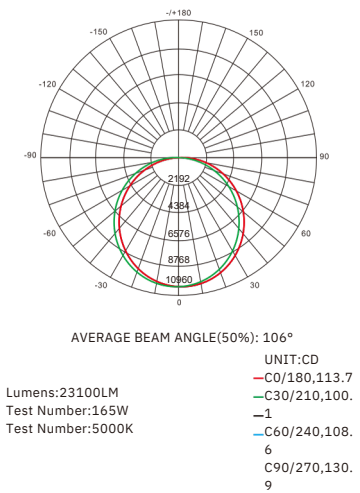

LHB-220W-50K

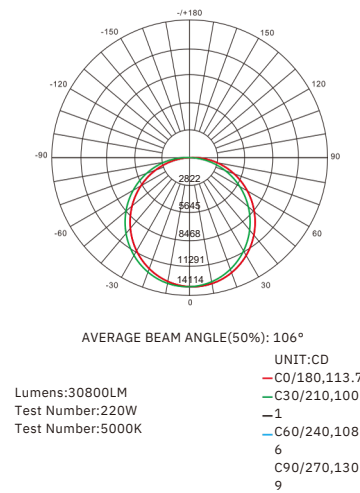

2CCT&3 Watt tunable Linear Highbay LED Light



A. Hanging Installation: Chain/Cable)

Step1. Hook up the chain; (Figure1)

Step2. Connect the chain with fixture; (Figure 1)

step3. Fix the chain on the rail, adjust the chain length as per need; (Figure 1)

Step4. After fixed, choose suitable wiring knock out, connect the wires according to local standard and code.

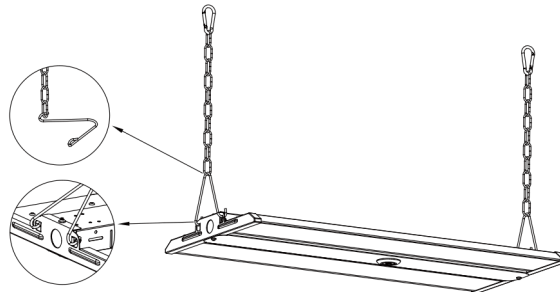


Figure 1

B. 3/4"NPT Installation:

Step1. Mount the bracket on 3/4"NPT; (Figure 2)

Step2. Lock fixture on the bracket; (Figure 3)

Step3. Connect the wires according to local standard and code.

Step4. Lock side brackets with screw driver. (Figure 4)



Figure 2

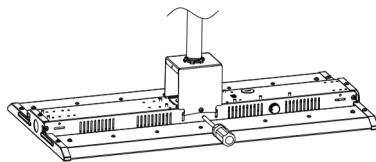


Figure 3

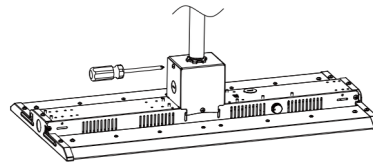


Figure 4

C. Surface Mounting: (If this bracket is used for the fixture, backup driver solution cannot be chosen)

Step1. Mount the bracket on the rail or ceiling (Figure 5);

Step2. Assemble the lamp on the bracket and fix it with screws (Figure 6);

Step3. After mounting, choose suitable wiring knock out and connect the wires according to local standard and code.

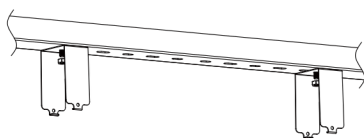


Figure 5

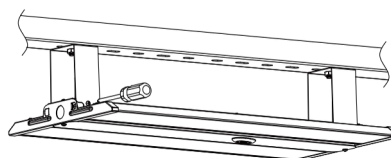


Figure 6

2CCT&3 Watt tunable Linear Highbay LED Light

Extra Accessory Option Installation: 1:Wire Guard, 2:Motion Sensor / PIR Sensor,3: Backup driver

1.Wire Guard: (Purchase the correct size wire guard from manufacturer)

Step1.Unscrew the two screws on the front of the lamp;(Figure 7)

Step2.Place the wire guard on the lamp and fix it with screws.(Figure 8)

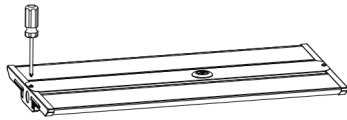


Figure 7

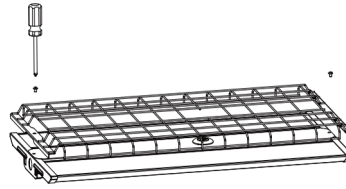


Figure 8

2-1.Motion Sensor/PIR Sensor: (Both sensor are with same installation)

Step1.Open the face cover with screw driver;(Figure 9)

Step2.Knock out the side cover, mount the sensor on the side, do wiring accofing to instruction on sensor; (Figure 10)

Step3.Put face cover back with screw driver. (Figure 11)

Wiring Instruction

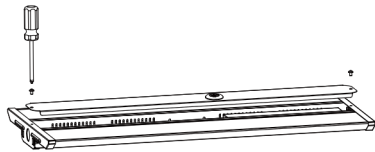


Figure 9


 


Figure 10



Figure 11

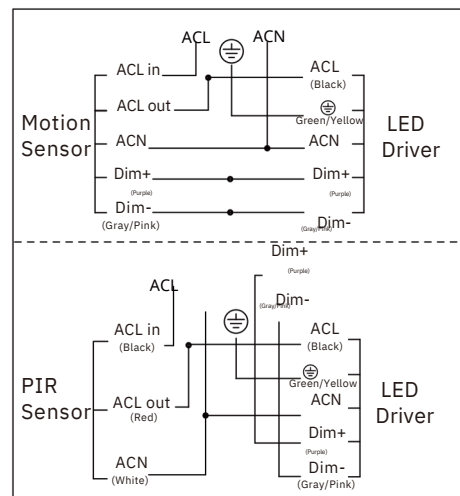

2-2.DC Motion Sensor I PIIR Sensor (Both sensors are with the same installation method)

Step1.Use a screwdriver to remove the 1/2 plug from the sensor; (Figure 12)

Step2.Twist-lock the DC sensor to the base to make it work properly, use a remote control to adjust the working mode as per demand.(Figure 13)

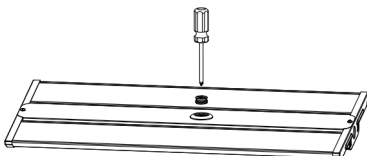


Figure 12

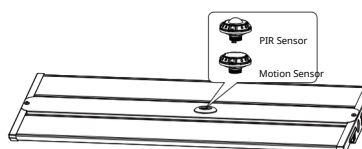


Figure 13