



V11 LED Shoebox light



Date:..... Location:

Product:..... Project:.....

Quantity:..... Catalog#

FEATURES

- Tunable 80/100/150w shoebox with Multiple mounts
- 100-277V or 200-480V input. 0-10V dimmable.
- Low profile housing with enhanced thermal heat sink.
- 6KV built-in plus 10KV external surge protection
- 50,000hrs Life time.

SUITABLE APPLICATIONS

- Warehouses
- Stadiums
- Factories
- Parking Lots
- Shopping Malls
- Supermarkets
- Logistic Centers
- Auto dealerships

CONSTRUCTION:

Heavy die-cast aluminum alloy housing with bronze powder-coated finish.

OPTICAL SYSTEM

High brightness lumileds LED chips.
Special PC lens with TYPE III and TYPE IV distribution

WARRANTY:

5-year limited warranty. Actual performance may differ as a result of end-user environment and application.

ELECTRICAL:

Available as 120-277/200-480V input. -20°C to 45°C,

INSTALLATION&MOUNTING:

Slip filters, arm mounts or trunion mounts for easy installation.

CONTROL&DIMMING

0-10V dimming comes standard. 277v or 480v Photocell available when requested.

PERFORMANCE

Model NO	Wattage	VOLT AGE	Voltage/CurrentInput		Light Efficiency	Kelvin Options
			120V	480V		
AST-S-G19-150WBT3A1-BRAM5780	80/100/150W	100-277V	1.25A	0.31A	140-145LM/W	570K
AST-S-G19-150WBT3H1-BRAM500	80/100/150W	200-480V	1.25A	0.31A	140-145LM/W	500K

Optional Mount Bracket:



AM Adjustable Slipfitter



DM Adjustable Direct Mount



YM Yoke Mount

Electric Characteristic

Specification/Model	AST-S-G19-150WBT3A1-BRAM57	57 AST-S-G19-150WBT3H1-BRAM50
LED Driver	UL LISTED DRIVER	
Input power	80/100/150W	80/100/150W
Lumens output	21000-21750LM	21000-21750LM
Efficiency	140-145LM/W	140-145LM/W
CRI	>80	>80
Color Temperature	5700K	5000K
Input voltage	100-277V/AC	200-480V/AC
Light distribution type	155*90D	155*90D
Working temperature	20+45°C	-20+45°C
Junction temperature	<75°C	< 7 5 °C
lamps efficiency	≥90%	≥90%
Certificate	UL CUL DLC	UL CUL DLC
Equivalent	300-6000W MH/HPS	600-1000W MH/HPS


PRODUCT ORDERING GUIDE

AST-S-G19-150WBT3A1-BRAM57

1 2 3 4 5 6 7 8
[AST]- S-G19-150WBT3A1-BRAM57

- ☒ AST Company name
- ☒ 150W Rating Power
- ☒ B for Lumileds ☒ T3 for TYPE III
- ☒ A1 120-277VAC ☒ BR Brown
- ☒ AM represent mounting bracket types
- ☒ 57 CCT:5700K


DISTRIBUTION DIAGRAM

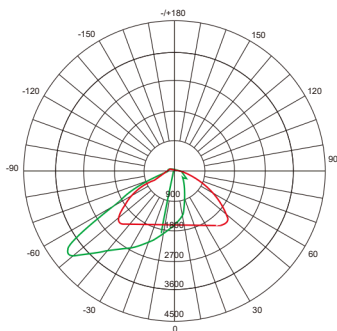

AVERAGE BEAM ANGLE(50%): 122°

Lumens:21750LM
Test Number:150W
Test Number:5700K

UNIT:CD
—C0/180,113.7
—C30/210,100.
—1
—C60/240,108.
6
C90/270,130.
9

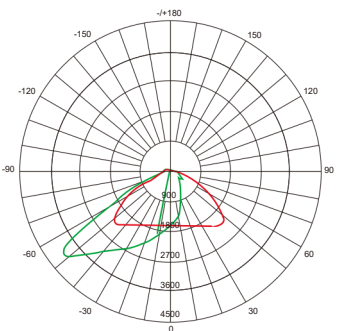


AVERAGE BEAM ANGLE(50%): 122°

Lumens:43500LM
Test Number:300W
Test Number:5700K

UNIT:CD
—C0/180,113.7
—C30/210,100.
—1
—C60/240,108.
6
C90/270,130.
9

DIMENSION

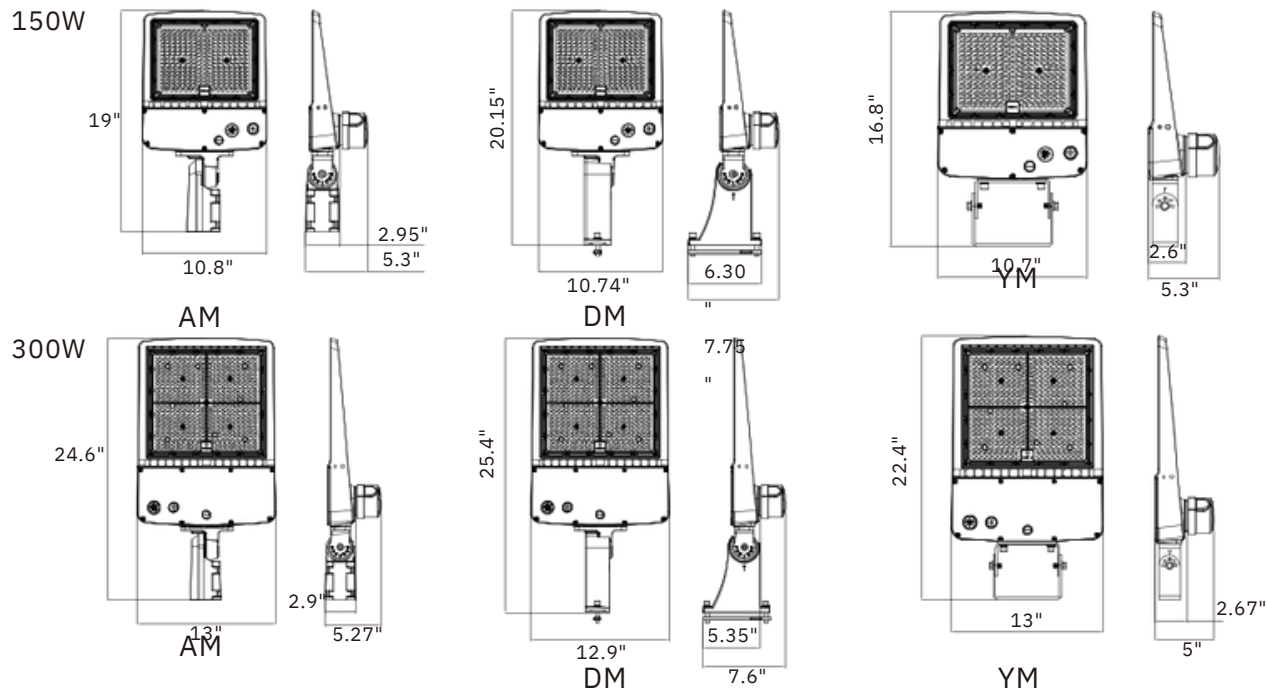

Installation Instruction

1. ADJUSTABLE FITTER MOUNTING (AM)

Step1: Loosen the 4 screws on the bracket with a screwdriver and make ensure that the bracket can fit into the light pole, Figure 1-1;

Step2: Connect the input wires of the fixture to the mains correctly, Figure 1-2;

Step3: Mount the fixture on the light pole and fix it with screws firmly to ensure that the fixture cannot be rotated or shaken, Figure 1-3;

Step4: If the installation angle of the fixture needs to be adjusted, loosen the screws of the bracket, and fix them again after finished adjustment, Figure 1-4;



Figure 1-1

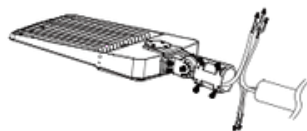


Figure 1-2



Figure 1-3



Figure 1-4

2. DIRECT MOUNTING (DM)

Step1: Loosen the screws on the bracket with a screwdriver and take off the bracket, Figure 2-1;

Step2: Fix the fixture on the pole after passing the input wire of the fixture through the pole, and then connect the input wires to the mains properly, Figure 2-2;

Step3: Fasten the pole cover to the pole after making sure the wires are connected correctly, Figure 2-3;

Step4: If the installation angle of the fixture needs to be adjusted, loosen the screws of the bracket, and fix them again after finished adjustment, Figure 2-4;

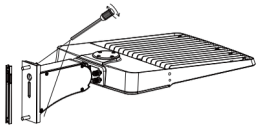


Figure 2-1

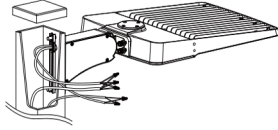


Figure 2-2

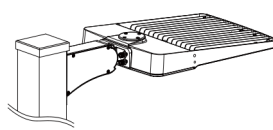


Figure 2-3

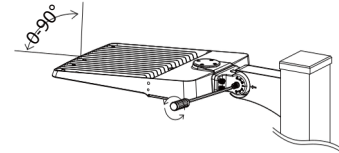


Figure 2-4

3.YOKE MOUNTING (YM)

Step1: Use a tool to punch two 67MM holes on the wall and then insert 2 expansion screws into the holes, Figure 3-1;

Step2: Fix the fixture on the expansion screws, Figure 3-2;

Step3: Connect the input wires of the fixture to the mains properly, Figure 3-3;

Step4: If the installation angle of the fixture needs to be adjusted, loosen the screws of the bracket, and fix them again after finished adjustment, Figure 3-4;




Figure 3-1



Figure 3-2



Figure 3-3

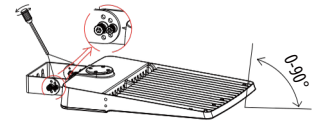


Figure 3-4